


Small seed/wildflower/forbs/legumes: Your seed will go in the **SMALL BACK** box.

1.4 bushel max capacity

DO NOT FILL SEED BOXES UNTIL YOU ARE IN THE FIELD!
DO NOT TRANSPORT WITH SEED IN THE BOXES!

- Follow steps on page 17 of the seed manual to *calibrate seeding rate for your specific seed if you choose to*; otherwise you can use the provided charts for approximate seeding rates. Locate your desired pounds per acres to be seeded in the chart of pages 21 & 22 and locate your seed type. **YELLOW** pages in the manual that is with the drill.
- This drill does **NOT** have factory installed plugs to shut off rows
- Adjust the small seed rate handle on the back of the drill to correspond with the setting number on the chart that matches up with your pounds per acre figure. (See page 17 of seed manual)
- Do **NOT** adjust the seed rate handle on the front of the drill.
- In field conditions, lower the drill into soil, pull forward to put openers in ground to desired depth. Shut off tractor, loosen the nut and bolt that secure the stop weldment to the cylinder (on the left cylinder only) Slide the weldment up the cylinder until it contacts the valve actuator, then slide it another 1/8" and tighten bolts. (See figures 11 & 12 on page 18 of the operator's manual)

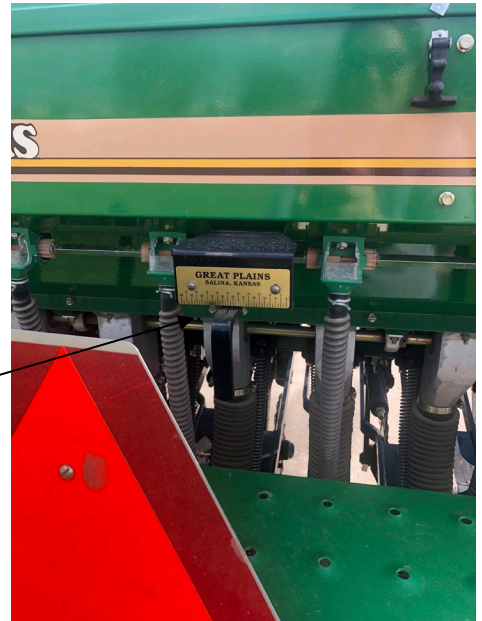


- The red piece in photo is safety lock for transporting drill; is one on each side of the drill. Remove before seeding.
- The stop weldment that is on the left cylinder is raised and lowered (by GENTLY loosening/tightening bolt) to adjust the cut depth of the coulters.
- The weldment **must be near the middle of the cylinder, and pointing up**, as shown in photo **while in use and before attempting to replace the safety locks**. The safety lock will not go on if the stop weldment is not between the two pins of the safety lock.
- **If you are having trouble with the depth control (ie: stop weldment is sliding down the cylinder) you are using too much force lowering the drill!** Make sure hydraulic connections are set on LOW FLOW and the drill is GENTLY lowered. High Flow and/or excessive force lowering drill will cause damage to the hydraulic valve and depth stop.

- See page 38 of the operator's manual for information on setting press wheels for seed depth. **T handles should be closer to implement for shallower seeding and further away from implement for deeper seeding.** Each increment adjusts depth by approx. 1/8th of an inch. Depth range is from 0 to 3 ½ inches



- Add your seed to the small BACK box
- Engage the left wheel and begin drilling.
- *If you suspect you are drilling more or less seed than desired, and you have accurately calibrated the drill to your seed, change the sprocket arrangement to compensate for your field conditions.*
- When you are finished- **disengage the left wheel, and record the acreage meter reading.** Complete steps under "Before Returning Drill" on the back of rental agreement sheet.
- When you are finished- disengage the left wheel and record the acreage meter reading.
- Complete the steps under "Before Returning Drill" on the back of rental agreement.

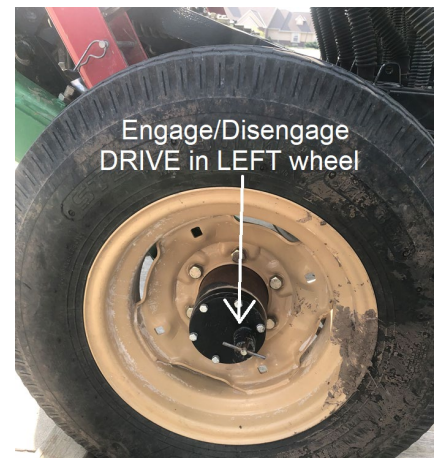

Seed type: _____ Pounds per acre: _____ Setting Number: _____

If seeding fescue at rate lower than 8 pounds per acre you will use Small Back Box; if seeding rate is over 8 pounds use Front Box.

Do NOT run fertilizer through the drill!

Small Seeds Rate Charts

U.S customary units. ~~Metric charts begin on page 11.~~

Alfalfa, Red Alsike, Crimson Clover

| | Small Seeds Cup Lever Setting | | | | | | | | | | | | | | | | | | | | |
|----------|---------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|------|------|------|------|------|------|------|------|------|------|
| | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Rows | Seeding Rate in Pounds per Acre | | | | | | | | | | | | | | | | | | | | |
| 7.5 inch | 0 | 0.0 | 1.8 | 2.8 | 3.9 | 4.8 | 6.0 | 7.0 | 7.9 | 9.0 | 10.0 | 11.1 | 12.1 | 13.2 | 14.0 | 15.3 | 16.2 | 17.2 | 18.3 | 19.3 | 20.3 |

Kentucky Bluegrass, Fescue, Annual Rye Grass

| | Small Seeds Cup Lever Setting | | | | | | | | | | | | | | | | | | | | |
|----------|---------------------------------|-----|-----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Rows | Seeding Rate in Pounds per Acre | | | | | | | | | | | | | | | | | | | | |
| 7.5 inch | 0 | 0.0 | 0.2 | .9 | 1.5 | 2.2 | 2.7 | 3.3 | 3.7 | 4.2 | 4.6 | 5.1 | 5.5 | 5.9 | 6.3 | 6.7 | 7.0 | 7.4 | 7.7 | 8.1 | 8.4 |

Bermuda, Red Top, Lespedeza Unhulled, Sercia, Sand, Weeping Love Grass

| | Small Seeds Cup Lever Setting | | | | | | | | | | | | | | | | | | | | |
|----------|---------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|
| | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Rows | Seeding Rate in Pounds per Acre | | | | | | | | | | | | | | | | | | | | |
| 7.5 inch | 0 | 0.0 | 0.5 | 0.9 | 1.4 | 2.1 | 2.6 | 3.3 | 4.0 | 4.7 | 5.3 | 5.8 | 6.3 | 6.7 | 7.2 | 7.6 | 8.2 | 8.8 | 9.3 | 9.8 | 10.4 |

Red & Sweet Clover, Lespedeza Hulled

| | Small Seeds Cup Lever Setting | | | | | | | | | | | | | | | | | | | | |
|----------|---------------------------------|-----|-----|-----|-----|-----|-----|-----|------|------|------|------|------|------|------|------|------|------|------|------|------|
| | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Rows | Seeding Rate in Pounds per Acre | | | | | | | | | | | | | | | | | | | | |
| 7.5 inch | 0 | 0.0 | 1.2 | 2.7 | 4.2 | 5.7 | 7.2 | 9.1 | 10.6 | 12.3 | 13.7 | 15.3 | 16.7 | 18.1 | 19.7 | 21.2 | 22.7 | 24.2 | 25.8 | 27.2 | 28.6 |

Orchard Grass

| | Small Seeds Cup Lever Setting | | | | | | | | | | | | | | | | | | | | |
|----------|---------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Rows | Seeding Rate in Pounds per Acre | | | | | | | | | | | | | | | | | | | | |
| 7.5 inch | 0 | 0.0 | 0.0 | 0.2 | 0.5 | 0.7 | 1.1 | 1.2 | 1.6 | 1.9 | 2.3 | 2.6 | 2.8 | 3.2 | 3.5 | 3.9 | 4.0 | 4.4 | 4.6 | 4.9 | 5.1 |

** Yellow pages*

Do NOT run fertilizer of ANYKIND through drill

Rate Charts, Small Seeds Box, continued...

Millet, Reed Canary

| | Small Seeds Cup Lever Setting | | | | | | | | | | | | | | | | | | | | |
|-----------------|--|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|------|------|------|------|------|------|------|
| | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Rows | Seeding Rate in Pounds per Acre | | | | | | | | | | | | | | | | | | | | |
| 7.5 inch | 0 | 0.3 | 1.2 | 2.0 | 2.8 | 3.6 | 4.4 | 5.2 | 6.0 | 6.8 | 7.6 | 8.4 | 9.3 | 10.1 | 10.9 | 11.7 | 12.5 | 13.3 | 14.1 | 14.9 | 15.1 |

**Ladino Clover, Canary Grass,
Timothy, Canola**

| | Small Seeds Cup Lever Setting | | | | | | | | | | | | | | | | | | | | |
|-----------------|--|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|------|------|------|------|------|------|------|------|------|
| | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Rows | Seeding Rate in Pounds per Acre | | | | | | | | | | | | | | | | | | | | |
| 7.5 inch | 0 | 0.0 | 0.9 | 1.6 | 2.6 | 3.9 | 4.9 | 6.1 | 7.4 | 8.6 | 9.8 | 11.1 | 12.5 | 13.7 | 14.9 | 16.3 | 17.6 | 18.8 | 20.4 | 21.9 | 23.5 |

Birdsfoot, Trefoil, Sudan

| | Small Seeds Cup Lever Setting | | | | | | | | | | | | | | | | | | | | |
|-----------------|--|-----|-----|-----|-----|-----|-----|-----|------|------|------|------|------|------|------|------|------|------|------|------|------|
| | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Rows | Seeding Rate in Pounds per Acre | | | | | | | | | | | | | | | | | | | | |
| 7.5 inch | 0 | 0.0 | 1.4 | 2.6 | 4.2 | 5.4 | 7.0 | 8.6 | 10.2 | 11.9 | 13.5 | 15.4 | 17.0 | 18.8 | 20.5 | 22.5 | 24.0 | 25.8 | 27.6 | 29.1 | 30.9 |

Franklin County Conservation District No Till Drill Rental Agreement

_____ will rent the 606NT Drill from the Franklin County Conservation District

On _____ in accordance of the following rental conditions:

- **Renter is responsible to pay the cost for any repairs** that are caused by negligence while the drill is rented to you, including flat tires, damaged/missing parts, etc. Report any malfunctions or damage immediately.
- **Renter assumes all risks** and will pay all costs and expenses arising out of the use, possession or maintenance thereof, and is to give immediate written notice to lesser stating damage to, or loss of possession of said equipment by any cause whatsoever.
- **Scheduling allows for 20 acres per day.** We reserve the right to assess a charge of \$240 per day for everyday the drill rented to you, during acceptable weather conditions and is setting idle. **We reserve the right to charge additional fee if drill is not returned on time.**
- **All equipment remains the personal property of the Franklin County Conservation District.** The Franklin County Conservation District reserves the right to possession of equipment at any time. The drill is provided as a service to Franklin County landowners through the Fr Co Conservation District; we appreciate you caring for the drill while in use! **Returning it in as good OR better condition than you picked it up is appreciated!**
- **Fr Co Conservation District does not provide any type of guarantee for grass or crop stand.** The owner's manual provided on the drill, and the attached information sheets, are to be used as informational guides and are in no way exact.
- **Always lift drill out of the ground when turning at row ends and for other short-radius turns.**
- The drill only needs hydraulics to lift, it does NOT need constant down force. Be cautious when lowering drill, it is NOT a heavy piece of equipment. **The depth stop weldment MUST remain in the middle of cylinder, pointing upward. SEE PHOTOS pg 3**
- **Do not transport the drill with seed in the boxes for any reason!** No fertilizer or "treated seed" is to be used in drill
- **Renter will be charged \$25.00 cleaning fee per box** if seed boxes have not been cleaned out when returned.
- **Make sure hydraulic hoses and light wiring are secure to tongue of drill so they do not drag on roadway.** Lights are wired to connect to tractor, if pulling after dark YOU need to provide adaptor for truck plug.
- **Take jack OFF the tongue when planting to avoid damaging /bending jack with tractor tire in tight turns. You bend it, you buy it!**
- **Road speed should not exceed 20MPH FOR ANY REASON and drive must be disengaged; field speed should not exceed 3 or 4 MPH.**
- **Acresage meter readings will be used to calculate total rental fee.** You must RECORD ACREAGE METER READING: Beginning # _____ Ending # _____ = Total Acres _____

The drill will be returned to the USDA Service Center by (date/time)_____

I acknowledge that I have read the above information and agree to all policies as listed.

Signature

If using the drill after hours/weekends and you need assistance call Keri at 785-865-8058

Before leaving with the drill you should: Road speed should not exceed 20MPH

- **Check to see that the tires are properly inflated-** if tire is low or flat call let us know so you are not charged for tire repair.
- **Check drill for damage, worn or missing parts-** report any damage or questionable damage so you are not charged for repairs.

Basic Field Operation

1. Hitch drill to a suitable tractor. **40hp is minimum requirement.**
2. Raise drill. Hold at raised for several seconds to re-phase lift cylinders. Set circuit to Neutral. Shut off tractor.
3. Remove red transport locks from cylinders. Move them to secure storage location.
4. Engage drive with lock-out hub on the drive wheel. Pull pin away from hub. Rotate 90 degrees. Release into deeper notch pair. *Note: Pin may not set fully immediately but will at next drill movement.*
5. Set seed population per rate chart or calibration, from Seed Rate manual.
6. Set seed cup handle if using FRONT Seed Box. **If you skip this seed could end up on the ground where you are filling drill!**
7. Load appropriate box with clean seed.
8. Raise drill. Check that feed cups, seed tubes and drives are working properly and free from foreign material by looking for seed flow under each opener.
9. Lower drill. Pull forward. Stop. Check tool bar height and opener depth.
10. Begin seeding. **Do not exceed 3 to 4 mph in the field.**
11. Always lift drill out of the ground when turning at row ends and for other short-radius turns. Seeding stops automatically as drill is raised.

There is a copy of both the Seed Rate Charts AND the Operators Manual in the manual box on the front of the drill; if you have any questions please refer to the appropriate manual.

Before Returning the Drill:

- **CLEAN OUT ALL SEED BOXES!** See page 3 of seed charts for information on adjusting seed cup doors for clean out on front box. Leaving seed in the drill is like leaving money in the drill. A shop-vac works well. We will assess a \$25.00 cleaning fee PER BOX if needed.
- Raise drill, re-install both transport locks on each side of the drill. **The transport locks should be placed on from the underside of the cylinders** (see page 22, figure 16 of operator manual).
- **On the left the cylinder, the stop weldment should be pointing upward, through the open portion of the transport lock. Do NOT remove the stop weldment.**
- Unhook hydraulic hoses from your tractor!
- **Disengage the driver side wheel!** If you do not disengage the wheel the acreage meter will keep rolling, remember you are charge based on the acreage meter reading.
- **Record ending reading from acreage meter on the front of this paper.**
- Check the drill for damage, worn or missing parts and that the tires are properly inflated. **If the drill has a flat or low tire that you did not reports as being flat or low before you started you are responsible for getting the tire repaired!**
- Also make sure drill is clean, inside and out. Empty seed boxes and if you get into excessive dirt or have hydraulic fluid on the drill- please clean it!
- Make sure you have 9 sprockets on the sprocket storage bars on the right side of the drill and both transport locks are securely in place.
- Make sure you returned the manual to the storage box if you used the manual.
- Report any problems to the Conservation District!
- You are now ready to return the drill to the Conservation District Office. **Do not travel any faster than 20 mph when pulling the drill!**

Remember to return the drill on time, there are other people lined up to rent it after you.

Park the drill in the northwest corner of the parking lot at the USDA Service Center in the designated "Drill Parking Only" area. Please park as close the grass on the west side of concrete as possible.

If returning on a Saturday or Sunday please call or text Keri to let her know its back!